# **ChemTec**

Flow Monitors Excess Flow Valves Flow Meters

ChemTec.com | 1.954.420.6174

# **Table of Contents**

LPH Series	01
FS Series	03
LFS Series	05
125 Series	07
125 BP Series	09
500 BP Series	11
LCA Series	13
FAV Series	15
CCM Series	17
MAO 125/250 Series	19
MAO 500 Series	21
EFV Series	23
EFV MRS Series	25
HPEFV Series	27
TEFLON <sup>®</sup> Products	29
LPH UHP Series	30

# LPH Series Non-Adjustable Flow Monitor

#### **Key Features**

Compact, Dependable, Economical

#### **Features**

- Close On-Off Differential
- Visual Indication of Flow with Acrylic Model
- No Seals
- In Line Vertical Plumbing
- Materials: Acrylic, Brass, 316SS or Teflon®
- Confirms: Normal Flow Conditions
- Senses: High Flow and Low Flow Conditions
- Output: Switch Contact

#### Operation

When air/water flows through the unit it causes the magnetic piston to move up at the calibration point. This displacement is caused by the pressure differential from the air/water flowing through the unit. The magnetic piston actuates a hermetically sealed reed switch, which is encapsulated in the body of the unit, out of the air/water path. Decreasing the flow below the calibration point causes the reed switch to de-actuate.

- Actuation points for air at 68°F and 14.7 PSIA with increasing flow.
- Deactuation (decreasing flow) averages 10% less than actuation (increasing flow).
- Calibration accuracy  $\pm 10\%$  of calibration points shown.
- Repeatability ±1%.
- Unit will pass greater flows.

#### **Pressure Loss**

ΔP AT SET POINT MBARS (INCHES OF WATER) ALL UNITS 11.2 (4.5)

Correction must be made for other fluids, line pressure and temperatures. Please consult your representative or the factory.

Specifications								
Body Material	Weight OZ (gm)	Max Working Pressure PSIG (barg)	Wetted Parts					
Acrylic	4 (113.4)	100 (6.89)	Acrylic, 316SS, Epoxy					
Brass	8 (226.8)	1500 (103.42)	Brass, 316SS, Epoxy					
316SS	8 (226.8)	3000 (206.84)	316SS, Epoxy					
Teflon	4 (113.4)	80 (5.52)	Teflon®					

#### **Temperature Operating Range**

0° to 220°F (-17° to 104°C) for 316SS, Brass and Teflon®
32° to 160°F (0° to 71°C) for Acrylic

For other temperature ranges consult factory.

#### Applications

- Analyzers
- Kidney Dialysis Machines
- Micro Biomedical Machines
- Laser Cooling Systems
- Bubbler Systems
- Pollution Sampling
   Equipment

#### **FNPT Port Sizes**

- LPH 125 1/8"
- LPH 250 1/8"
- LPH 375 1/4"



#### **Calibration Table**


Model	Air SCC/M (SCFH)	Water ML/M (GPH)
LPH-125		
0	50 (0.105)	1 (0.016)
-1	120 (0.254)	2 (0.03171)
-2	560 (1.187)	16 (0.25369)
-3	750 (1.589)	30 (0.47567)
-4	1300 (2.755)	45 (0.71350)
-5	1400 (2.966)	50 (0.79278)
-6	1900 (4.026)	65 (1.0306)
-7	2500 (5.297)	85 (1.3477)
-8	2700 (5.721)	90 (1.4270)
-9	3300 (6.992)	105 (1.6648)
-10	3600 (7.628)	120 (1.9027)
-11	5200 (11.02)	170 (2.6955)
-12	6000 (12.71)	200 (3.1711)
LPH-250		
-1	350 (0.742)	7 (0.111)
-2	6000 (12.71)	200 (3.171)
-3	7500 (15.89)	250 (3.964)
-4	9500 (20.12)	315 (4.994)
-5	10500 (22.25)	346 (5.486)
-6	12500 (26.49)	400 (6.342)
-7	15200 (32.21)	500 (7.928)
-8	24000 (50.85)	760 (12.05)
LPH-375		
-1	3000 (6.36)	70 (1.110)
-2	15200 (32.21)	475 (7.531)
-3	30300 (64.20)	950 (15.06)
-4	37000 (78.40)	1425 (22.59)**
-5	45300 (95.99)	2200 (34.88)**

\*\*Teflon® encapsulated piston not available

(€ c**A)**us

Switch Data	SPST	SPDT					
Maximum Switching Vo	Itage						
DC (V)	250	175					
AC (V)	265	120					
Contact Rating							
DC (W)	50	5					
AC (VA)	50	5					
Maximum Switching Current (A)							
DC (A)	1.5	0.25					
AC (A)	1.1	0.18					



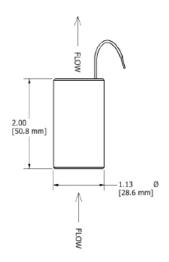

Mount with the inlet port down vertically. A 10 micron filter is recommended.

Leads Up; Leads Down; Conduit; Normally Open Normally Closed N.O. Conduit Offset Down N.C. Conduit Offset Up

# How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Size	Calibration	Materials	Electrical Conduit	Media	S	Switch		Options
LPH	125 250 375	See Cal. Table	A Acrylic B Brass S 316SS T Teflon®	C (Metallic Bodies Only) (1/2" FNPT)	W Water A Air	N.O.	Single Pole Single Throw Normally Open	TFE	Teflon® Encapsulated Piston (Standard in Teflon Units)
			(TFE piston standard in Teflon units)			N.C.	Single Pole Single Throw Normally Closed	02	Oxygen Cleaned
						SPDT	Single Pole Double Throw	ΗT	High Temperature Options 340°F (171°C)
						DSNONO	Double Switch N.O./N.O.		metallic body only
						DSNONC	Double Switch N.O./N.C.	ΗV	High Voltage Switch (220 VAC)
						DSNCNC	Double Switch N.C./N.C.		
						DCNONO	Double Conduit N.O./N.O.		
						DCNONC	Double Conduit N.O./N.C.		
						DCNCNC	Double Conduit N.C./N.C.		

# FS Series Non-Adjustable Flow Monitor

#### **Key Features**

Economical Liquid Flow Sensor

#### **Features**

- Non-Adjustable Flow Monitor
- Low Maintenance
- Close On-Off Differential
- No Seals
- Single Moving Part
- In Line Vertical Plumbing
- Materials: 316 SS, Brass or PVC
- Confirms: Normal Flow Condition
   Senses: High Flow or
- Low Flow ConditionsOutput: Switch Contact

# Operation

As flow is established upward through the unit and continues to increase, the pressure differential across the magnetic piston increases until it overcomes the magnetic piston's resistance (mass). The magnetic piston actuates a hermetically sealed reed switch, which is encapsulated in the body of the unit, out of the air/water path. This is a snap action and occurs in the decreasing mode as well.

- Actuation Points for increasing flow
- Calibration Accuracy ±10% of actuation point
- Deactuation (decreasing flow) averages 10% less than actuation (increasing flow)
- Repeatability ±2%
- Unit will pass greater flows

#### **Temperature Operating Range**

- 0° to 228°F (-17° to 104°C ) for Brass and Stainless Steel
- 32° to120° F (0° to 49°C) for PVC

For other temperature ranges consult factory.

Specifications								
Body Material	Weight	Max Working Pressure PSIG (barg)	Wetted Parts					
PVC	1/2" 0.2lb	100 (6.89)	PVC, Epoxy					
Brass	1/2" 0.7lb	250 (17.22)	Brass, Epoxy					
316SS	1/2" 0.7lb	500 (34.45)	316SS, Epoxy					
PVC	3/4" 0.3lb	100 (6.89)	PVC, Epoxy					
Brass	3/4" 1.0lb	250 (17.22)	Brass, Epoxy					
316SS	3/4" 0.1lb	500 (34.45)	316SS, Epoxy					
PVC	1" 0.4lb	100 (6.89)	PVC, Epoxy					
Brass	1" 1.2lb	250 (17.22)	Brass, Epoxy					
316SS	1" 1.2lb	500 (34.45)	316SS, Epoxy					

#### Applications

- Laser Cooling Systems
- Heat PumpsCooling Systems



#### **Calibration Table**

Cambration		
Model	PVC LPM (GPM)	Brass or 316SS LPM (GPM)
FS-50		
-A	0.57 (0.15)	0.95 (0.25)
-B	0.95 (0.25)	1.89 (0.50)
-C	1.89 (0.50)	3.79 (1.00)
-D	2.84 (0.75)	5.68 (1.50)
-E	3.79 (1.00)	7.57 (2.00)
-F	4.73 (1.25)	9.46 (2.50)
FS-75		
-A	0.76 (0.20)	1.89 (0.50)
-B	1.89 (0.50)	3.79 (1.00)
-C	2.84 (0.75)	7.57 (2.00)
-D	3.79 (1.00)	11.4 (3.00)
-E	3.68 (1.50)	15.1 (4.00)
-F	7.57 (2.00)	21.8 (5.75)
FS-1		
-A	0.95 (0.25)	7.57 (2.00)
-В	2.84 (0.75)	9.46 (2.50)
-C	3.79 (1.00)	11.4 (3.00)
-D	7.57 (2.00)	15.1 (4.00)
-E	11.4 (3.00)	22.7 (6.00)
-F	15.1 (4.00)	32.2 (8.50)

#### **Pressure Loss**

 $\Delta P$  to atmosphere at set point PSID (BARD)

Water PVC Units All set points - 0.50 (0.034)


Metal Units All set points - 1.00 (0.069)

#### (€ **₀¶J**us

Switch Data	SPST	SPDT					
Maximum Switching Vo	ltage						
DC (V)	250	175					
AC (V)	265	120					
Contact Rating							
DC (W)	50	5					
AC (VA)	50	5					
Maximum Switching Current (A)							
DC (A)	1.5	0.25					
AC (A)	1.1	0.18					



Fluid	Ports: Inlet/Outlet	Ports Inches
Model	FNPT (PVC)	MNPT (Brass or 316SS)
FS-50	1/2"	1/2"
FS-75	3/4"	3/4"
FS-1	1"	1"

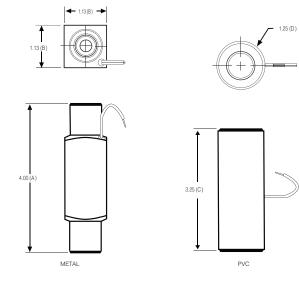

Mount vertically, inlet down. Filtration - 100 Micron Filter Recommended.

Dimensions Inches (mm)								
FS-50 FS-75 FS-I								
METAL	А	4.00 (101.6)	4.50 (114.3)	4.50 (114.3)				
METAL	В	1.125 (28.70)	1.25 (31.75)	1.50 (38.10)				
PVC	С	3.25 (88.52)	3.75 (95.25)	4.50 (114.3)				
PVC	D	1.25 (31.75)	1.50 (38.10)	1.75 (44.45)				

# How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Size	Calibration	Materials	Switch		Options
FS	-50 -75 -1	A B C D E F	P PVC B Brass S 316SS	N.O. Single Pole S Normally Ope SPDT Single Pole Double Throw	en	High Temperature Option 340°F (171°C) (metallic body only)

Note: All dimensions are subject to change for quality improvement. Not responsible for printing errors.

#### **Key Features**

Chemically inert, Non-restrictive at higher flows.

#### **Features**

- Close On-Off Differential
- In Line Vertical Plumbing
- Confirms: Normal Flow Conditions
- Senses: High Flow or Low Flow Conditions
- Material: Polypropylene
- Output: Switch Contact

#### **Applications**

- Deionized Water
- Chemical Process Systems
- Cooling Systems
- Heat Pump Systems
- Laser Cooling Systems

#### Operation

As flow is established upward through the unit and continues to increase, the pressure differential across the magnetic piston increases until it overcomes the magnetic piston's resistance (mass). The magnetic piston actuates a hermetically sealed reed switch, which is encapsulated in the body of the unit, out of the air/water path. This is a snap action and occurs in the decreasing mode as well.

- Actuation Points for increasing flow
- Calibration Accuracy ±10% of actuation point
- Deactuation (decreasing flow) averages 10% less than actuation (increasing flow)
- Repeatability ±2%
- Unit will pass greater flows

#### **Temperature Operating Range**

0° to 228°F (-17° to 104°C) for Brass and Stainless Steel
32° to 120°F (0° to 49°C) for Polypropylene
For other temperature ranges consult factory.

Specifications						
Unit	Weight OZ (gm)	Max Working Pressure PSIG (barg)	Wetted Parts	Seals		
Polypropylene	10.469 (0.213)	100 (6.89)	PP, Epoxy	Viton		

#### **Pressure Loss**

△P at 5 GPM (18.925) PSID (BARD)

All set points - 1.00 (0.069)





# Calibration Table

Model	Water LPM (GPM)
LFS-500-PP-C	
-1	0.38 (0.10)
-2	1.89 (0.50)
-4	3.78 (1.00)
-6	5.68 (1.50)
-8	7.57 (2.00)

Corrections must be made for other liquids, line pressures and temperatures. Please consult your representative or the factory.

Switch Data	SPST	SPDT				
Maximum Switching Vo	Maximum Switching Voltage					
DC (V)	250	175				
AC (V)	265	120				
Contact Rating						
DC (W)	50	5				
AC (VA)	50	5				
Maximum Switching Cu	Maximum Switching Current (A)					
DC (A)	1.5	0.25				
AC (A)	1.1	0.18				



Fluid	Ports: Inlet/Outlet	Ports Inches
Model	FNPT	Electrical Conduit
LFS	1/2"	1/2" Female Slip Fitting

# FLOW FLUID PORTS; 1/2" FNPT CONDUIT; 1/2" FEMALE SLIP FIT

00

#### Installation

Mount with inlet port down vertically. A 100 micron filter is recommended.

3.50 [88.9 mm]

3.25

[82.6 mm]

## How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Calibration	Switch
LFS 500 PPC	-1 -2 -4 -6 -8	<ul><li>N.O. Single Pole Single Throw Normally Open</li><li>SPDT Single Pole Double Throw</li></ul>

Note: All dimensions are subject to change for quality improvement. Not responsible for printing errors. Viton®

Ø2.25 [57.2 mm]

#### **Key Features**

Best for applications where the ratio (Normal Flow/Set Point) is 10:1 or greater, minimal pressure drop.

#### **Features**

- Broad Range of Adjustability
- Compact Size
- High Resolution
- Materials: 316SS, Brass or Teflon®
- Confirms: Normal Flow Conditions
- Senses: High Flow and Low Flow Conditions
- Output: Switch Contact

#### **Operation**

A magnetic piston is suspended by the repulsion of a fixed magnet. When fluid flows through the unit it causes the magnetic piston to move against the repulsion of the fixed magnet. The magnet piston actuates an encapsulated hermetically-sealed reed switch out of the fluid path. Decreasing the flow below the calibration point causes the reed switch to de-actuate. Set point is adjustable.

- Actuation Points for air at 68°F and 14.7 PSIA with increasing flow
- Deactuation (decreasing flow) averages 30% less than actuation (increasing flow).
- Repeatability ±2%
- Unit will pass greater flows

Correction must be made for other fluids, line pressure and temperatures. Please consult your representative or the factory.

#### **Temperature Operating Range**

#### • 0° to 220°F (-17° to 104°C)

For other temperature ranges consult factory.

Specifica				
Unit	Weight OZ (gm)	Max Working Pressure PSIG (barg)	Wetted Parts	Seals
Teflon®	4 (113.4)	80 (5.52)	Teflon®	Teflon®
Brass	12 (340.2)	1500 (103.42)	Brass, Epoxy	Viton®
316SS	12 (340.2)	3000 (206.84)	316SS, Epoxy	Viton®

(€ c¶] us

#### Applications

- Welding Systems
- Analyzers
- Vacuum SystemsCooling Systems
- Cooling S
  Chillers
- Biochemical Instruments
- Process Flows




Calibration Table					
Model		Air SCC/M (SCFH)	Water ML/M (GPH)	Ports FNPT	
125	Minimum	30 (0.063)	1 (0.016)	1/8"	
	Minimum	16000 (33.90)	500 (7.93)		

Pressure Loss				
Air Flowrate SCC/M (SCFH)	Water Flowrate ML/M (GPH)	ΔP to Atmosphere MBARS (Inches of Water)		
30 (.064)	1 (0.016)	8.71 (3.50)		
310 (.657)	30 (0.48)	25.8 (10.38)		
1500 (3.178)	300 (4.76)	29.7 (11.92)		
16000 (33.9)	500 (7.93)	63.8 (25.63)		

Switch Data	SPST	SPDT				
Maximum Switching Vo	Maximum Switching Voltage					
DC (V)	250	175				
AC (V)	265	120				
Contact Rating						
DC (W)	50	5				
AC (VA)	50	5				
Maximum Switching Cu	Maximum Switching Current (A)					
DC (A)	1.5	0.25				
AC (A)	1.1	0.18				



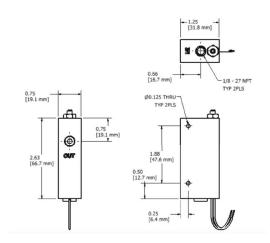

Mount with the inlet port up vertically. Inlet port down changes the adjustable range of the unit. A 10 micron filter is recommended.

### How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Materials	Electrical Conduit (Optional)		Switch		Options
125	T Teflon® B Brass 316 Stainless	C (Metallic Bodies Only) (1/2" FNPT)	N.O.	Single Pole Single Throw Normally Open	TFE	Teflon Encapsulated Piston**
			SPDT	Single Pole Double Throw	02	Oxygen Cleaned
					HT	High Temperature Options 340°F (171°C) metallic body only
					KZ EPR BN FP	FFKM Perfluoroelastomer EPR Seals Buna N Seals Factory Preset

\*Consult Factory \*\*Standard with Teflon unit | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

# **125 BP Series** Bypass Adjustable Flow Monitor

#### **Key Features**

Best for applications where the ratio (Normal Flow/Set Point) is 10:1 or less.

#### **Features**

- Broad Range of Adjustability
- Compact Size
- High Resolution
- Close On-Off Differential
- Ease of Customer Setting
- Monitors Gases or Liquids
- Materials: 316SS, Brass or Teflon®
- Confirms: Normal Flow Conditions
- Senses: High Flow and Low Flow Conditions
- Output: Switch Contact

#### Operation

When no flow is present the free magnetic piston rests on the bottom of the bore, which is in a bypass off the main line. Adjustment of the orifice in the main line creates a small bypass flow to lift the magnetic piston and actuate the reed switch. The magnetic piston actuates a hermetically sealed reed switch, which is encapsulated in the body of the unit, out of the air/water path. When flow decreases, the piston moves downward and the reed switch deactuates.

- Actuation Points for air at 68°F and 14.7 PSIA with increasing flow
- Deactuation (decreasing flow) averages 10% less than actuation (increasing flow)
- Repeatability ±2%
- Unit will pass greater flows

Correction must be made for other fluids, line pressure and temperatures. Please consult your representative or the factory.

#### Temperature Operating Range

• 0° to 220°F (-17° to 104°C)


For other temperature ranges consult factory.

Specifica				
Unit	Weight OZ (gm)	Max Working Pressure PSIG (barg)	Wetted Parts	Seals
Teflon®	4.4 (123.5)	100 (6.89)	Teflon®	Teflon®
Brass	16 (453.6)	1500 (103.42)	Brass, Epoxy	Viton®
316SS	16 (453.6)	3000 (206.84)	316SS, Epoxy	Viton®

(€ °**M)** na

#### Applications

- Vacuum Systems
- Wet Stations
- Gas Analyzers
- Cooling SystemsIndustrial Fluid Lines
- Process Flows

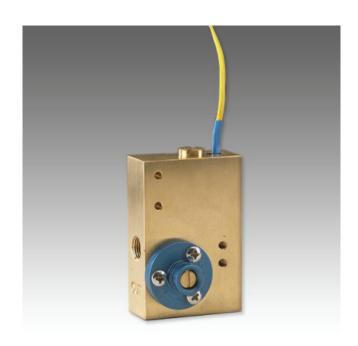


Calibration Table				
Model		Air SCC/M (SCFH)	Water ML/M (GPH)	Ports FNPT
125 BP	Minimum	100 (0.21)	3 (0.048)	1/8"
120 DF	Maximum	20000 (42.4)	500 (7.93)	
125 BPHF	Minimum	200 (0.42)	5 (0.079)	1/8"
	Maximum	60000 (127)*	950 (15.105)	

Pressure Loss				
Air Flowrate SCC/M (SCFH)	Water Flowrate ML/M (GPH)	ΔP to Atmosphere MBARS (Inches of Water)		
100 (.21)	3 (0.048)	1.2 (0.5)		
5500 (11.7)	200 (3.17)	9.3 (3.71)		
7000 (14.8)	400 (6.34)	11.7 (4.71)		
20000 (42.4)	500 (7.93)	24.7 (9.93)		
60000 (127.1)	950 (15.10)	69.7 (28.0)		

\*At 60 PSIG (4.137 BARG)

Switch Data	SPST	SPDT			
Maximum Switching Vo	Itage				
DC (V)	250	175			
AC (V)	265	120			
Contact Rating					
DC (W)	50	5			
AC (VA)	50	5			
Maximum Switching Current (A)					
DC (A)	1.5	0.25			
AC (A)	1.1	0.18			



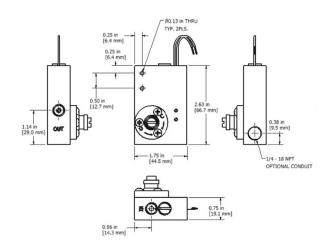

Mount vertically with the inlet port at bottom. A 10 micron filter is recommended.

# How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Materials	By Pass Design	Electrical Conduit	Switch	Options
125 BP	T Teflon® B Brass 316 Stainless	BP Bypass BPHF Bypass High Flow	C (1/4 FNPT) Blank for Standard Unit	N.O. Single Pole Single Throw Normally Open	TFE Teflon Encapsulated Piston**
				SPDT Single Pole Double Throw	02 Oxygen Cleaned HT High Temperature Options 340°F (171°C) metallic body only
					KZ FFKM Perfluoroelastomer EPR EPR Seals BN Buna N Seals FP Factory Preset

\*Consult Factory \*\*Standard with Teflon unit | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

# 500 BP Series Bypass Adjustable Flow Monitor

Best for applications where the ratio (Normal Flow/Set Point) is 10:1 or less.

#### **Features**

- Low Minimum Operating Pressure
- Close On-Off Differential
- Ease of adjustability
- In Line 180 Degree Porting
- Monitors Gases or Liquids
- Confirms: Normal Flow Conditions
- Senses: High Flow and Low Flow Conditions
- Water or Explosion Proof Covers
- Materials: 316SS, Brass
- Output: Switch Contact

#### Operation

With no flow present, the magnetic piston rests on the bottom of the bypass bore. When flow is established the piston is forced upward by the bypass flow and actuates the reed switch. The magnetic piston actuates a hermetically sealed reed switch, which is encapsulated in the body of the unit, out of the air/water path. The bypass flow is controlled by manual adjustment of the flow control vane. When flow decreases the piston moves downward and the reed switch deactuates.

- Actuation Points for air at 68° F and 14.7 PSIA with increasing flow
- Deactuation (decreasing flow) averages 10% less than actuation (increasing flow)
- Repeatability ±2%
- Unit will pass greater flows

Correction must be made for other fluids, line pressure and temperatures. Please consult your representative or the factory.

#### Temperature Operating Range

• 0° to 220°F (-17° to 104°C)

For other temperature ranges consult factory.

Specifica				
Unit	Weight Lb (kg)	Max Working Pressure PSIG (barg)	Wetted Parts	Seals
Teflon®	1.5 (0.68)	80 (5.51)	Teflon®	Teflon®
Brass	4 (1.81)	1500 (103.42)	Brass, Epoxy	Viton®
316SS	4 (1.81)	3000 (206.84)	316SS, Epoxy	Viton®

#### (€ c**¶]**us

#### Applications

- Vacuum Systems
- Wet Stations
- Shipboard Water Systems
- CVD Furnaces Cooling Water
- Biomedical InstrumentsCoolant Failure Alarm




#### **Calibration Table**

Model		Air SLPM (SCFM)	Water LPM (GPM)	Ports FNPT
500 BP	Minimum	6 (0.20)	0.11 (0.03)	1/2"
	Maximum	991 (35)	15.14 (4)	
	Minimum	23 (0.80)	0.38 (0.10)	1/2"
500 BPHF	Maximum	2124 (75)	37.85 (10)	

Pressure Loss					
Air Flowrate SLPM (SCFM)	Water Flowrate LPM (GPM)	ΔP to Atmosphere MBARS (PSID)			
84.9 (3)	3.8 (1)	17.2 (0.25)			
566 (20)	15.1 (4)	51.7 (0.75)			
1,557 (55)	30.3 (8)	233 (3.38)			
1925.5 (68)	37.9 (10)	362 (5.25)			
2265.3 (80)	64.4 (17)	517 (7.50)			

Switch Data	SPST	SPDT			
Maximum Switching Vo	Itage				
DC (V)	250	175			
AC (V)	265	120			
Contact Rating					
DC (W)	50	5			
AC (VA)	50	5			
Maximum Switching Current (A)					
DC (A)	1.5	0.25			
AC (A)	1.1	0.18			

Leads	SPST UL File #E70063	SPDT UL File #E471070
body 22 A	ation	leads 18 in. min. from body 24 AWG, TFE insulation • green - N.C. • blue - N.O. • white - Common

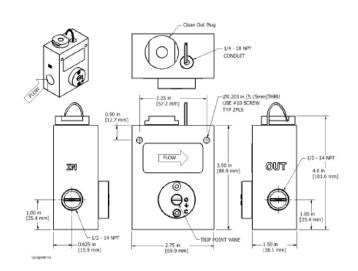

Mount vertically (leads up) with horizontal piping. A 100 micron filter is recommended.

# How to Order

#### Sales@ChemTec.com | 800.222.2177

Mo	odel	Size	Materials	By Pass Design		Switch		Options
5	500	Т В 316	Teflon®** Brass 316SS	BP Bypass BPHF Bypass High Flow	N.O.	Single Pole Single Throw Normally Open	TFE	Teflon® Encapsulated Piston **
					SPDT	Single Pole Double Throw	02 HT	Oxygen Cleaned High Temperature Options 340°F (171°C) metallic body only
							KZ EPR BN FP	FFKM Perfluoroelastomer EPR Seals Buna N Seals Factory Preset

\*Consult Factory \*\*Standard with Teflon unit | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

# LCA Series Adjustable Flow Monitor

#### **Key Features**

Best for applications where the ratio (Normal Flow/ Set Point) is 10:1 or Greater, Minimal Pressure Drop.

#### **Features**

- Broad Range of Adjustability
- Compact Size
- High Resolution
- Materials: 316S S, Brass or Teflon®

#### **Applications**

- Welding Systems
- Analyzers
- Vacuum Systems
- Cooling Systems

#### Operation

When flow is increased, the magnetic piston is forced against a bias spring. As the magnet comes near the adjustable reed switch it actuates, indicating proper flow. When flow decreases the spring forces the piston in the opposite direction deactuating the reed switch an indicating a reduced or no flow situation. The magnetic piston actuates a hermetically sealed reed switch, which is encapsulated in the body of the unit, out of the air/water path.

- All models field adjustable
- Deactuation (decreasing flow) averages 40% less than actuation (increasing flow)
- Repeatability ± 2%
- Correction must be made for attitudes other than horizontal
- Unit will pass greater flows

Specifications				
Model	Weight Lbs (kg)	Max Working Pressure PSIG (barg)	Wetted Parts	
LCA-250-P	0.375 (0.17)	100 (6.89)	PVC, Epoxy, 316SS	
LCA-250-B	1.4 (0.635)	1500 (103.42)	Brass, Epoxy, 316SS	
LCA-250-S	1.4 (0.635)	3000 (206.84)	316SS, Epoxy	
LCA-375-P	0.375 (0.17)	100 (6.89)	PVC, Epoxy, 316SS	
LCA-375-B	1.4 (0.635)	1500 (103.42)	Brass, Epoxy, 316SS	
LCA-375-S	1.4 (0.635)	3000 (206.84)	316SS, Epoxy	
LCA-500-P	0.375 (0.17)	100 (6.89)	PVC, Epoxy, 316SS	
LCA-500-B	1.4 (0.635)	1500 (103.42)	Brass, Epoxy, 316SS	
LCA-500-S	1.4 (0.635)	3000 (206.84)	316SS, Epoxy	
LCA-750-P	0.625 (0.283)	100 (6.89)	PVC, Epoxy, 316SS	
LCA-750-B	1.7 (0.771)	1500 (103.42)	Brass, Epoxy, 316SS	
LCA-750-S	1.7 (0.771)	3000 (206.84)	316SS, Epoxy	



#### **Calibration Range**

Model	Adjustable Range Increasing Flow Water LPM (GPM)	Air LPM (SCFM)	Inlet/Outlet FNPT Port Inches
LCA-250*	0.38-15.1 (0.10 - 4)	14.16 (0.5) 1416 (5)	1/4"
LCA-375*	1.89-15.1 (0.5 - 4)	14.16 (0.5) 1416 (5)	3/8"
LCA-500*	1.89 - 37.9 (0.5 - 10)	28.32 (1) 2124 (75)	1/2"
LCA-750*	3.79 - 56.8 (1 - 15)	114.60 (5) 3398 (120)	3/4"

#### Pressure Loss

Model	Water LPM (GPM)	ΔP BARD (PSID)
LCA-250/375		
Minimum	0.38 (0.10)	0.34 (0.5)
Maximum	15.14 (4)	0.21 (3)
LCA-500		
Minimum	1.89 (0.5)	0.069(1)
Maximum	37.85 (10)	0.689 (10)
LCA-750		
Minimum	3.79 (1)	0.10 (1.5)
Maximum	56.8 (15)	0.62 (9)

#### **Temperature Operating Range**


• 0° to 228°F (-17° to 104°C) for Brass and Stainless Steel

- 32° to120°F (0° to 49°C) for PVC
- 32° to120°F for Acrylic

For other temperature ranges consult factory

#### (€ c**¶]**us

Switch Data	SPST	SPDT			
Maximum Switching Vo	Itage				
DC (V)	250	175			
AC (V)	265	120			
Contact Rating					
DC (W)	50	5			
AC (VA)	50	5			
Maximum Switching Current (A)					
DC (A)	1.5	0.25			
AC (A)	1.1	0.18			

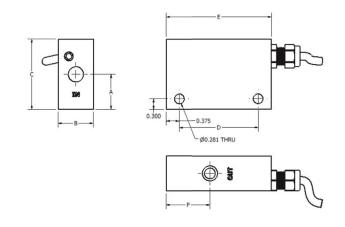

# LeadsSPST<br/>UL File #E70063SPDT<br/>UL File #E471070Image: state of the state of

#### Installation

Mount with the inlet port on the side horizontally. Other attitudes change the adjustable range of the unit. A 100 micron filter is recommended.

Dimensions						
Model	А	В	С	D	E	F
LCA-250	1.00 (25.4)	1.00 (25.4)	2.00 (50.8)	2.25 (57.15)	3.0 (76.2)	1.25 (31.8)
LCA-375	1.00 (25.4)	1.00 (25.4)	2.00 (50.8)	2.25 (57.15)	3.0 (76.2)	1.25 (31.8)
LCA-500	1.00 (25.4)	1.00 (25.4)	2.00 (50.8)	2.25 (57.15)	3.0 (76.2)	1.25 (31.8)
LCA-750	1.63 (41.4)	1.25 (31.8)	2.75 (69.9)	3.25 (82.55)	4.0 (101.6)	1.63 (41.4)

#### How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Materials	Type of Service	Switch
LCA 250 375 500 750	<ul><li>P PVC</li><li>A Acrylic</li><li>B Brass</li><li>S 316SS</li></ul>	W Water G Gas	N.O. Normally Open SPDT Single Pole Double Throw FP* Factory Preset

\*Consult Factory

All dimensions are subject to change for quality improvement. Not responsible for printing errors.

# FAV Series Adjustable Flow Monitor

#### **Key Features**

Best for applications where the normal flow to set point is 10:1 or greater.

#### **Features**

- Adjustable Flow Monitor
- Monitors both Gases and Liquids
- Materials: Brass or 316SS
- Confirms: Normal Flow Conditions
- Senses: High Flow or Low Flow Conditions
- Output: Switch Contact

#### Operation

When flow is increased, the magnetic piston is forced against a bias spring. As the magnet comes near the adjustable reed switch it actuates, indicating proper flow. When flow decreases the spring forces the piston in the opposite direction deactuating the reed switch and indicating a reduce or no flow condition. The magnetic piston actuates a hermetically sealed reed switch, which is encapsulated in the body of the unit, out of the air/water path.

- Actuation points for air at 68 F and 14.7 PSIA with increasing flow.
- Deactuation (decreasing flow) averages 40% less than actuation (increasing flow)
- Repeatability ±2%
- Unit will pass greater flows

Correction must be made for other fluids, line pressure and temperatures. Please consult your representative or the factory.


Calibratio	n Range		
Model	Weight Lbs (kg)	Max Working Pressure PSIG (barg)	Wetted Parts
FAV-250-B	1.4 (0.635)	1500 (103.42)	Brass, Epoxy, 316SS
FAV-250-S	1.4 (0.635)	3000 (206.84)	316SS, Epoxy
FAV-375-B	1.4 (0.635)	1500 (103.42)	Brass, Epoxy, 316SS
FAV-375-S	1.4 (0.635)	3000 (206.84)	316SS, Epoxy
FAV-500-B	1.4 (0.635)	1500 (103.42)	Brass, Epoxy, 316SS
FAV-500-S	1.7 (0.635)	3000 (206.84)	316SS, Epoxy
FAV-750-B	1.7 (0.771)	1500 (103.42)	Brass, Epoxy, 316SS
FAV-750-S	1.7 (0.771)	3000 (206.84)	316SS, Epoxy

#### **Temperature Operating Range**

• 0° to 220°F (-17° to 104°C) for Brass and Stainless Steel For other temperature ranges consult factory.

#### Applications

- Process Controls
- Fire Control Systems
- Water Treatment Chemicals
- Cooling Systems
- Heat Pumps
- Hydraulic Lifts
- Industrial Analyzers
- Plant Safety

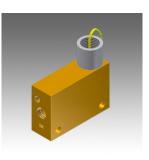

#### Pressure Loss


Air SLPM (SCFM)	Water LPM (GPM)	Inlet/Outlet FNPT Port Inches
		1/4"
14.16 (0.5)	0.38 (0.10)	
1416 (50)	15.14 (4)	
		3/8"
14.16 (0.5)	0.38 (0.10)	
1416 (50)	15.14 (4)	
		1/2"
28.32 (1)	1.89 (0.5)	
2124 (75)	37.85 (10)	
		3/4"
141.6 (5)	3.78 (1)	
3398 (120)	75.7 (20)	
	(SCFM) 14.16 (0.5) 1416 (50) 14.16 (0.5) 1416 (50) 28.32 (1) 2124 (75) 141.6 (5)	(SCFM)         (GPM)           14.16 (0.5)         0.38 (0.10)           1416 (50)         15.14 (4)           14.16 (0.5)         0.38 (0.10)           1416 (50)         15.14 (4)           28.32 (1)         1.89 (0.5)           2124 (75)         37.85 (10)           141.6 (5)         3.78 (1)


Specifications					
Model	Air Flow Rate SLPM (SCFM)	Water Flowrate LPM (GPM)	ΔP to Atmosphere BARD (PSID)		
FAV-250/375					
Minimum	14.2 (0.5)	0.38 (0.10)	0.34 (0.5)		
Maximum	1416 (50)	15.14 (4)	0.21 (3)		
FAV-500					
Minimum	28.32 (1)	1.89 (0.5)	0.069 (1)		
Maximum	2124 (75)	37.85 (10)	0.689 (10)		
FAV-750					
Minimum	141.6 (5)	3.78 (1)	0.10 (1.5)		
Maximum	3398 (120)	75.7 (20)	0.62 (9)		



Switch Data	SPST	SPDT		
Maximum Switching Vo	Itage			
DC (V)	250	175		
AC (V)	265	120		
Contact Rating				
DC (W)	50	5		
AC (VA)	50	5		
Maximum Switching Current (A)				
DC (A)	1.5	0.25		
AC (A)	1.1	0.18		

Leads	SPST UL File #E47258	SPDT UL File #E47258
body 22 A	ation	leads 18 in. min. from body 24 AWG, TFE insulation • green - N.C. • blue - N.O. • white - Common

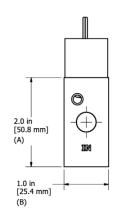

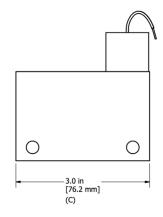

Mount with the inlet port on the side horizontally. Other attitudes change the adjustable range of the unit. A 100 micron filter is recommended.

Dimensions				
Model	А	B (Metal)	B (Plastic)	С
FAV-250	2.0 (50.8)	1.00 (25.4)	1 (25.4)	3.0 (76.2)
FAV-375	2.0 (50.8)	1.00 (25.4)	1 (25.4)	3.0 (76.2)
FAV-500	2.0 (50.8)	1.00 (25.4)	1 (25.4)	3.0 (76.2)
FAV-750	2.75 (69.9)	1.25 (31.8)	1.25 (31.8)	4.0 (101.6)

# How to Order

#### Sales@ChemTec.com | 800.222.2177

	Model	Ν	Materials	Туре	of Service		Switch		Options
FAV	250 375 500 750	B S	Brass 316SS	W G	Water Gas	N.O. SPDT	Normally Open Single Pole Double Throw	HT FP*	High Temperature Options 340 ° F (171°C) Factory Preset

\*Consult Factory | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

#### **Key Features**

Best for applications where the ratio (Normal Flow/Set Point) is 10:1 or Greater, Minimal Pressure Drop.

#### **Features**

- Adjustable Flow Monitor
- High Resolution
- Works in Very Low Flow Environments
- Minimal Pressure Drop
- Gas and Liquid Flow Sensor
- Materials: PVC
- Confirms: Normal Flow Conditions
- Senses: High Flow, Low Flow
- Output: Switch Contact

#### **Applications**

- Gas Chromatography
- Analyzers
- Filter Maintenance
- Metering Equipment
- Corrosive Chemicals
- Gas Generators

#### Operation

With no flow present, the magnetic piston is held at the flow tube inlet by magnetic repulsion of the fixed magnet at the opposite end. As flow is established the piston is displaced toward the magnetic end plug and a major portion of the flow is bypassed through the flow tube orifice into the annular space. At the adjustment point the magnetic piston actuates the reed switch. On decreasing flow the switch deactuates. The magnetic piston actuates a hermetically sealed reed switch, which is encapsulated in the body of the unit, out of the air/water path.

- Actuation points for air at 68°F and 14.7 PSIA with increasing flow
- Deactuation (decreasing flow) averages 40% less than actuation (increasing flow)
- Repeatability ±2%
- Unit will pass greater flows

Correction must be made for other fluids, line pressure and temperatures. Please consult your representative or the factory.

#### Operation

Inlet 1/8" FNPT|Outlet 1/4" FNPT

#### **Temperature Operating Range**

• 32° to 140°F (0° to 60°C) for PVC For other temperature ranges consult factory.

(€ c**¶]**us





Calibration Range					
Model	Air SCC/M (SCFH)	Water ML/M (GPH)	ΔP to Atmosphere MBARS (Inches in Water)		
CCM-00					
Minimum	10 (0.021)	1 (0.016)	2.49 (1.0)		
Maximum	150 (0.32)	5 (0.08)	19.0 (8.0)		
CCM-010					
Minimum	150 (0.32)	8 (0.13)	0.99 (0.4)		
Maximum	1000 (2.12)	180 (2.9)	17.4 (7.0)		
CCM-015					
Minimum	500 (1.06)	20 (0.32)	1.74 ( 0.7)		
Maximum	6000 (12.7)	370 (5.9)	19.9 (8.0)		
CCM-125					
Minimum	6000 (12.7)	65 (1.03)	3.73 (1.5)		
Maximum	16000 (33.9)	5000 (7.9)	12.4 (5.0)		

Specifica				
Body Material	Weight OZ (gm)	Max Working Pressure PSIG (barg)	Wetted Parts	Seals
PVC	6oz (170 gm)	100 (6.89)	PVC, Epoxy	Buna N

Switch Data	SPST	SPDT		
Maximum Switching Vo	Itage			
DC (V)	250	175		
AC (V)	265	120		
Contact Rating				
DC (W)	50	5		
AC (VA)	50	5		
Maximum Switching Current (A)				
DC (A)	1.5	0.25		
AC (A)	1.1	0.18		



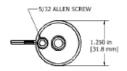

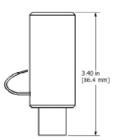

Mount with the inlet port up vertically. A 10 micron filter is recommended

# How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Size	Switch	Options
ССМ	-00 -010 -015 -125	N.C. Normally Closed SPDT Single Pole Double Throw	TFETeflon® Encapsulated PistonKZFFKM PerfluoroelastomerEPREPR SealsFPFactory Preset

\*Consult Factory | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

# MAO Series 125/250 Flow Meter

#### **Key Features**

All Teflon® wetted parts model available. No seals. Undamaged by over ranging.

#### **Features**

• No Bearings

Operation

- Single Moving Part
- In Line Metering
- No Rotating internals
- Materials:316SS, Brass or Teflon®
- Output: Analog, Digital and Current loop
- Measures Low Flows

# ApplicationsWet Benches

- Cooling Systems
- Corrosive Chemical Dispensing
- Materials Consumption Measurement
- Process Controls Patent No's 4,858,647 4,905,844
  - 5,033,311
  - Others may apply.

When fluid flows through the unit it displaces the Teflon encapsulated magnetic piston. This displacement is proportional to the volumetric flow through the unit. A transducer, encapsulated in the body outside the fluid path, senses the displacement of the piston. The transducer's signal is converted by a microprocessor-based conditioning circuit then sends the signal to three types of outputs: voltage, pulse and current loop.

- Total accuracy: ±5%
- Repeatability: ±2% full scale
- Linearity: ±2% full scale

#### **Temperature Operating Range**

- Ambient: 0° to 125°F (-18° to 52°C)
- Media: 0° to 180°F (-18° to 82°C)

Specifications						
Model	Weight Lbs. (Kg.)	Max Working Pressure PSIG (barg)	Wetted Parts			
MAO-125/250-T	0.63 (0.29)	80 (5.51)	Teflon®			
MAO-125/250-B	1.30 (0.59)	1500 (103.42)	Brass, Teflon®			
MAO-125/250-S	1.30 (0.59)	3000 (206.84)	316SS, Teflon®			

Pressure Loss					
Model	Min/Max	Linear Range ML/M (GPH)	ΔP MBARS (PSID)		
MAO-125-AA	Minimum	20 (0.32)	24.82 (0.36)		
IVIAU-125-AA	Maximum	70 (1.11)	42.06 (0.61)		
MAO-125-BB	Minimum	50 (0.79)	8.27 (0.12)		
WAU-123-00	Maximum	150 (0.79)	10.34 (0.15)		
MAO-250-AA	Minimum	100 (1.59)	8.27 (0.12)		
WAO-250-AA	Maximum	500 (7.93)	9.65 (0.14)		
MAO-250-BB	Minimum	260 (4.12)	10.34 (0.15)		
IVIAU-200-DD	Maximum	1800 (28.54)	20 (0.29)		

#### **Calibration in Water**

Model	ML/MIN (GPH)	VDC	Hz	mA	Ports FNPT
	0	0	0	0	1/8"
	20 (0.317)	1	40	4	
MAO-	32.5 (0.5151)	2	80	8	
125XAA	45 (0.7133)	3	120	12	
	57.5 (0.9114)	4	160	16	
	70 (1.1095)	5	200	20	
	0	0	0	0	1/8"
	50 (0.7925)	1	40	4	
MAO-	75 (1.1888)	2	80	8	
125XBB	100 (1.585)	3	120	12	
	125 (1.9813)	4	160	16	
	150 (2.3775)	5	200	20	
	0	0	0	0	1/4"
	100 (1.585)	1	40	4	
MAO-	200 (3.1701)	2	80	8	
250XAA	300 (4.7551)	3	120	12	
	400 (6.3401)	4	160	16	
	500 (7.9252)	5	200	20	
MAO-	0	0	0	0	1/4"
	250 (3.9626)	1	40	4	
	638 (10.1125)	2	80	8	
250XBB	1025 (16.2466)	3	120	12	
	1413 (22.3965)	4	160	16	
	1800 (28.5306)	5	200	20	



# 19

125/250 Flow Meter

**MAO Series** 

#### **Electrical Specifications**


POWER REQUIREMENTS: Voltage: Regulated 15 – 30 VDC Current: 250 mA

OUTPUTS: ANALOG: 0 – 5 VDC Minimum Load Impedance: 5k ohm in parallel with 250pf

DIGITAL: 200 Hz, Square wave 50% duty cycle TTL compatible output.

CURRENT LOOP: Current Loop: 4 - 20 mA Loop Load :  $100\Omega \pm 1\%$  1/4 watt

WIRE CONNECTION: Red – (+) Black – (Common) White – (Frequency) Green – (Voltage) Brown – (Current)

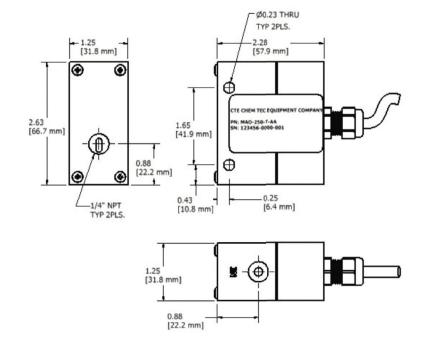

#### How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Size	Switch	Options
MAO	125 250	T Teflon® B Brass S Stainless Steel	(See Chart) AA BB

\*Consult Factory \*\*Standard with Teflon unit | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

#### Installation

Control valves should be placed downstream of the MAO flow meter. The flow meter should never be installed so that it drains completely when flow ceases. When particles may be present in the media, a filter should be installed ahead of the flow meter. It is advisable to filter to 10 microns. The MAO flow meter should not be located near ferrous material or near strong electromagnetic fields.

The MAO flow meter is sensitive to velocity prole disturbances in the flow stream. It is advisable that straight lengths of 10 inside diameters upstream and 5 inside diameters downstream be used. All lines should be completely purged of air before use. The use of pipe paste is not recommended. Use care when using Teflon tape to avoid shreds from entering the MAO flow meter.

#### Mounting

MAO-125-X-AA; Mount with INLET vertical, INLET port up, OUTLET port horizontal. All other models mount with INLET port vertical, INLET port down, OUTLET port horizontal.

# MAO Series

#### **Key Features**

All Teflon® wetted parts model available. No seals. Undamaged by over ranging.

#### **Features**

- No Bearings
- Single Moving Part
- In Line Metering
- No Rotating internalsMaterials:316SS, Brass
- or Teflon®Output: Analog, Digital
- and Current loop
- Measures Low Flows

#### Operation

When fluid flows through the unit it displaces the Teflon encapsulated magnetic piston. This displacement is proportional to the volumetric flow through the unit. A transducer, encapsulated in the body outside the fluid path, senses the displacement of the piston. The transducer's signal is converted by a microprocessor-based conditioning circuit then sends the signal to three types of outputs: voltage, pulse and current loop.

- Total Accuracy: ±5%
- Repeatability: ±2% Full Scale
- Linearity: ±2% Full Scale

#### **Temperature Operating Range**

- AMBIENT: 0° to 125°F (-18° to 52°C)
- MEDIA: 0° to 180° F (-18° to 82°C)

Specifications						
Model	Weight Lbs. (Kg.)	Max Working Pressure PSIG (barg)	Wetted Parts			
MAO-500-T	1.3 (0.6)	80 (5.51)	Teflon®			
MAO-500-B	3.4 (1.54)	1500 (103.42)	Brass, Teflon®			
MAO-500-S	3.4 (1.54)	3000 (206.84)	316SS, Teflon®			

Pressure Loss						
Model	Linear Range LPM (GPM)	ΔP MBARS (PSID)				
	1.89 (0.5)	247.58 (0.4)				
MAO-500-AA	7.57 (2.0)	31.03 (0.45)				
MAO-500-BB	3.79 (1.0)	27.58 (0.40)				
MAC-300-BB	13.25 (3.5)	68.95 (1.0)				

#### **Applications**

- Wet Benches
- Cooling Systems
- Corrosive Chemical Dispensing
- Materials Consumption Measurement
- Process Controls Patent No's 4,858,647 4,905,844
  - 5,033,311
  - Others may apply.



Calibration in Water					
Model	MLMIN (GPH)	VDC	Hz	mA	Ports FNPT
	0	0	0	0	1/2"
	0.5 (1.89)	1	40	4	
MAO-	0.75 (2.84)	2	80	8	
500XAA	1.25 (4.73)	3	120	12	
	1.75 (6.62)	4	160	16	
	2 (7.57)	5	200	20	
	0	0	0	0	1/2"
	1 (3.79)	1	40	4	
MAO- 500XBB	1.6 (6.06)	2	80	8	
	2.2 (8.33)	3	120	12	
	2.8 (10.6)	4	160	16	
	3.5 (13.25)	5	200	20	

500 Flow Meter

#### **Electrical Specifications**

**MAO Series** 


POWER REQUIREMENTS: Voltage: Regulated 15 – 30 VDC Current: 250 mA


OUTPUTS: ANALOG: 0 – 5 VDC Minimum Load Impedance: 5k ohm in parallel with 250pf

DIGITAL: 200 Hz, Square wave 50% duty cycle TTL compatible output

CURRENT LOOP: Current Loop: 4 - 20 mA Loop Load :  $100\Omega \pm 1\%$  1/ 4 watt

WIRE CONNECTION: Red – (+) Black – (Common) White – (Frequency) Green – (Voltage) Brown – (Current)

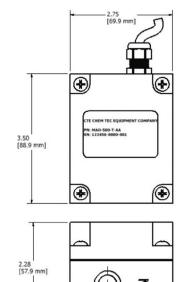

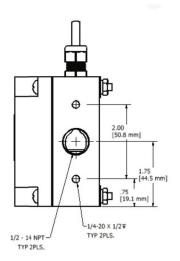

#### **How to Order**

#### Sales@ChemTec.com | 800.222.2177

Model	Size		Switch	Options
MAO	500	T B S	Teflon® Brass Stainless Steel	(See Chart) AA BB

\*Consult Factory \*\*Standard with Teflon unit | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

#### Installation

1.75 [44.5 mm]

Control valves should be placed downstream of the MAO flow meter. The flow meter should never be installed so that it drains completely when flow ceases.

When particles may be present in the media, a filter should be installed ahead of the flow meter. It is advisable to filter to 10 microns. The MAO flow meter should not be located near ferrous material or near strong electro-magnetic fields.

The MAO flow meter is sensitive to velocity profile disturbances in the flow stream. It is advisable that straight lengths of 10 inside diameters upstream and 5 inside diameters downstream be used.

All lines should be completely purged of air before use.

The use of pipe paste is not recommended. Use care when using Teflon tape to avoid shreds from entering the MAO flow meter.

#### Mounting

Mount with INLET vertical, INLET port down, OUTLET port horizontal.

# **EFV Series** Adjustable Excess Flow Valve

#### Key Features

Controls excessive flows.

#### **Features**

- Controlled Bleed, Resets Automatically
- Field Adjustable
- Positive Shut-off
- Function: Restricts or Shuts Off Flow
- Output: Switch Contact Optional
- Materials: 316SS or Brass Body

#### **Applications**

- Fitting Failure
- Regulator failure
- Hydraulic control
- Gas Analyzers
- Toxic Gas and
  - Liquid Releases



#### **Calibration Range**

Model	Adjustable Range Air SLPM (SCFM)	Adjustable Range Water LPM (GPM)	PORT FNPT
EFV-125	0.5 to 155.7 (0.018 to 5.5)	0.015 to 4.5 (0.004 to 1.2)	1/8"
EFV-250	4 to 1132 (0.14 to 40)	0.100 to15.1 (0.026 to 4.0)	1/4"
EFV-375	85 to1840 (3.0 to 65)	0.380 to15.1 (0.100 to 4.0)	3/8"
EFV-500	142 to 2123 (5.0 to 75)	1.90 to 37.8 (0.50 to 10.0)	1/2"
EFV-750	425 to 3681 (15.0 to1 30)	3.80 to 75.7 (1.0 to 20.0)	3/4"

#### Pressure Loss

riessure	L035		
Model	Air SLPM (SCFM)	Water LPM (GPM)	ΔP to Atmosphere BARD (PSID)
EFV-125	0.50 (0.018)	0.015 (0. 004)	0.08 (1.2)
	75 (2.63)	2.65 (0.70)	0.11 (1.6)
	155 (5.5)	4.50 (1.20)	0.21 (3.0)
EFV-250	4 (0.14)	0.1 (0.26)	0.21 (3.0)
	500 (17.50)	5.0 (1.32)	0.41 (6.0)
	1132 (39.62)	15.1 (3.99)	0.83 (12.0)
EFV-375	85 (2.98)	0.38 (0.10)	0.10 (1.5)
	900 (31.50)	10.0 (2.64)	0.28 (4.0)
	1840 (64.40)	15.1 (3.99)	0.83 (12.0)
EFV-500	142 (4.97)	1.9 (0.50)	0.07 (1.0)
	1000 (35.00)	25.0 (6.60)	0.28 (4.0)
	2123 (74.31)	37.8 (9.98)	0.48 (7.0)
EFV-750	425 (14.88)	3.8 (1.00)	0.14 (2.0)
	1800 (63.00)	4.7 (1.24)	0.21 (3.0)
	3681 (128.84)	75.7 (19.98)	0.34 (5.0)

# Operation

Flow enters the unit and makes a right angle to the outlet port across the nose of a magnetic piston. The piston is held in place by attraction to an adjusting screw magnet. A pressure differential is created by flow across the piston. When the differential is great enough, the piston slides to a seat at the outlet port. The flow rate at which the piston actuates can be changed externally by turning the adjusting screw, thereby changing the piston's relationship with the flow stream. In this auto reset model after actuation, the piston rests on a metal to metal seat which allows a controlled bleed. To reset the unit, pressure must be equalized on both sides of the piston. If the source is turned off, either upstream or downstream, the bleed will equalize the pressure and the valve will automatically reopen by magnetic repulsion from the fixed magnet located in the valve body.

For positive shut-off an elastomer is used on the nose of the piston. When it comes to rest on the seat it provides a bubble tight closure. To reopen the valve there are two options.

1. The upstream pipeline must be led to atmosphere if the line downstream is at atmosphere.

2. A by-pass line with an on/off valve must be installed to port the upstream pressure to the down-stream pipeline to equalize the pressure.

Our MRS series is available with the by-pass system as an integral part of the unit.

• Actuation points for air at 68°F and 14.7 PSIA.


Correction must be made for other fluids, line pressure and temperatures. Please consult your representative or the factory.

#### **Temperature Operating Range**

- 0° to 220°F (-17° to 104°C)
- For other temperature ranges consult factory.

ES - Option				
Switch Data	SPST UL File #E70063	LEADS		
Maximum Switching Volta	age			
DC (V)	200	μų		
AC (V)	150			
Contact Rating	Contact Rating			
DC (W)	50			
DC (VA)	70	leads 18 in.		
Maximum Switching Curr	min. from body 22 AWG, TFE			
DC (A)	1.0	insulation		
AC (A)	0.7			

Body Material	Max Working Pressure PSIG (barg)	Wetted Parts	Seals
Brass	1500 (103.42)	Brass, Epoxy, Delrin (Brass Piston in 125 Unit)	Viton ®
316SS	3000 (206.84)	316SS, Epoxy	Viton ®

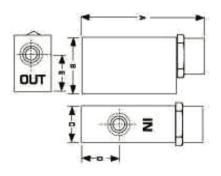

We suggest the unit be calibrated in the attitude in which it will be installed. An actuation point approximately 3 or 4 times normal flow rate should be chosen to avoid the valve actuating from initial pressurization of the system and normal surges. If flow is kept constant, an actuation point 10% above the normal rate may be used.

Dimensions						
Model	Weight	А	В	С	D	Е
EFV-125	0.25 (113.4)	2.5 (64)	1 (25)	0.75 (19)	0.7 (17)	0.63 (16)
EFV-250	0.50 (226.8)	3.3 (84)	1.50 (38)	1 (25)	1 (25)	1 (25)
EFV-375	0.50 (226.8	3.3 (84)	1.50 (38)	1 (25)	1 (25)	1 (25)
EFV-500	1 (453.6)	4.0 (102)	2 (50)	1.25 (31)	1.25 (31)	1.38 (35)
EFV-750	1.50 (680.4)	4.9 (124)	2.25 (57)	1.25 (31)	1.25 (31)	1.63 (41)

# How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Size	Materials	Positive Shut-Off	Options
EFV	125 250 375 500 750	B Brass S 316SS (Other Material available on request)	PSO (Blank for Controlled Bleed Model)	<ul> <li>ES Reed Switch (Not available on 125 models)</li> <li>Ozygen Cleaned</li> <li>KZ FFKM Perfluoroelastomer</li> <li>EPR EPR Seals</li> <li>FP Factory Presetting (State flow rate, medium and line pressure) Required W/ES Option</li> <li>ESFP Normally Open Reed Switch Option Requires Factory Presetting</li> </ul>

\*Consult Factory | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

# EFV MRS Series

Manual Reset Adjustable Excess Flow Valve

#### **Key Features**

Controls excessive flows.

#### **Features**

- Field Adjustable
- Manual Reset
- Materials: 316SS
- Detects Excess Flows
- Function: Shuts Off Flow
- Output: Switch Contact (Optional)

#### **Applications**

- Plant Lines
- Regulator Failure
- Fitting Failure
- Toxic Gases & Liquids
- Gas Distribution Systems
- Gas Analyzers
- Loss Controls



#### Operation

Flow enters the unit and makes a right angle to the outlet port across the nose of a magnetic piston. The piston is held in place by attraction to an adjusting screw magnet. A pressure differential is created by flow across the piston. When the differential is great enough, the piston slides to a seat at the outlet port. The flow rate at which the piston actuates can be changed by turning the adjusting screw, thereby changing the piston's relationship with the flow stream. The piston makes a bubble tight seal when it comes in contact with the seat. To reopen the unit, turn the balancing valve handle on the side. This ports the upstream pipeline to the downstream pipeline. When the pressure is equalized on each side of the piston, it will reset. The unit is returned to normal operation by closing the balancing valve.

• Actuation points for air at 68° F and 14.7 PSIA.

Corrections must be used for other gases, line pressure and temperatures.\* Please consult your representative or the factory.

#### **Temperature Operating Range**

- AMBIENT: 0° to 125°F (-18° to 52° C)
- MEDIA: 0° to 180°F (-18° to 82° C)

Calibration Range				
Model	Adjustable Range Air SLPM (SCFM)	Adjustable Range Water LPM (GPM)	PORT FNPT	
EFV-125	0.5 to 155.7 (0.018 to 5.5)	0.015 to 4.5 (0.004 to 1.2)	1/8"	
EFV-250	4 to 1132 (0.14 to 40)	0.100 to 15.1 (0.026 to 4.0)	1/4"	
EFV-375	85 to 1840 (3.0 to 65)	0.380 to 15.1 (0.100 to 4.0)	3/8"	
EFV-500	142 to 2123 (5.0 to 75)	1.90 to 37.8 (0.50 to 10.0)	1/2"	
EFV-750	425 to 3681 (15.0 to130)	3.80 to 75.7 (1.0 to 20.0)	3/4"	

Pressure Loss				
Model	Air SLPM (SCFM)	Water LPM (GPM)	ΔP to Atmosphere BARD (PSID)	
EFV-125	0.50 (0.018)	0.015 (0. 004)	0.08 (1.2)	
	75 (2.63)	2.65 (0.70)	0.11 (1.6)	
	155 (5.5)	4.50 (1.20)	0.21 (3.0)	
EFV-250	4 (0.14)	0.1 (0.26)	0.21 (3.0)	
	500 (17.50)	5.0 (1.32)	0.41 (6.0)	
	1132 (39.62)	15.1 (3.99)	0.83 (12.0)	
EFV-375	85 (2.98)	0.38 (0.10)	0.10 (1.5)	
	900 (31.50)	10.0 (2.64)	0.28 (4.0)	
	1840 (64.40)	15.1 (3.99)	0.83 (12.0)	
EFV-500	142 (4.97)	1.9 (0.50)	0.07 (1.0)	
	1000 (35.00)	25.0 (6.60)	0.28 (4.0)	
	2123 (74.31)	37.8 (9.98)	0.48 (7.0)	
EFV-750	425 (14.88)	3.8 (1.00)	0.14 (2.0)	
	1800 (63.00)	4.7 (1.24)	0.21 (3.0)	
	3681 (128.84)	75.7 (19.98)	0.34 (5.0)	

# **EFV MRS Series** Manual Reset Adjustable Excess Flow Valve

**ES - Options** SPST Switch Data LEADS UL File #E70063 Maximum Switching Voltage DC (V) 200 AC (V) 150 Contact Rating DC (W) 50 DC (VA) 70 leads 18 in. min. Maximum Switching Current (A) from body 22 AWG, TFE insulation DC (A) 1.0 AC (A) 0.7

Body Material	Max Working Pressure PSIG (barg)	Wetted Parts	Seals
Brass	1500 (103.42)	Brass, Epoxy, Delrin (Brass Piston in 125 Unit)	Viton®
316SS	3000 (206.84)	316SS, Epoxy	Viton®

#### Dimensions

Dimensions								
Model	316SS Weight (lbs/gm)	Brass Weight (lbs/gm)	А	B 316SS	B Brass	С	D	E
EFV-125	1.5 (680)	1.6 (726)	2.72 (69)	1.5 (38)	1.5 (38)	0.95 (24)	1.12 (28)	1.62 (41)
EFV-250	3.5 (1588)	3.3 (1497)	3.71 (95)	2 (50)	1.75 (45)	1.5 (38)	1.38 (35)	2 (51)
EFV-375	3.5 (1588)	3.2 (1452)	3.71 (95)	2 (50)	1.75 (45)	1.5 (38)	1.38 (35)	2 (51)
EFV-500	4 (1814)	3.6 (1633)	4.46 (114)	2 (50)	1.75 (45)	1.75 (45)	1.38 (35)	2 (51)
EFV-750	4.8 (2177)	4.4 (1996)	5.35 (136)	2 (50)	1.75 (45)	2.13 (54)	1.38 (35)	2 (51)

How to Order

#### Sales@ChemTec.com 800.222.2177

Model	Size	Materials	Manual Reset	Options
EFV	125 250 375 500 750	B Brass S 316SS (Other Material available on request)	MRS	ES*Reed Switch (Not available on 125 models)O2Oxygen CleanedHTHigh TemperatureUnit 340°F (171°C)KZFFKM PerfluoroelastomerEPREPR SealsFP*Factory Presetting (State flow rate, medium and line pressure)Required W/ES OptionESFPNormally Open Reed Switch Option Requires Factory Presetting

\*Consult Factory | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

ChemTec.com | info@ChemTec.com | P: 954.420.6174 | F: 954.428.8745 | 3077 S.W. 13th Dr., Deerfield Beach, FL 33442

#### Installation

We suggest the unit be calibrated in the attitude in which it will be installed. An actuation point approximately 3 or 4 times the normal Maximum flow rate at the lowest line pressure should be chosen to avoid the valve actuating from initial pressurization of the system and normal surges. If flow is kept constant, an actuation point 10% above the normal rate may be used.

# **HPEFV Series**

Adjustable High Pressure Safety Excess Flow Valve

#### **Key Features**

Controls high pressure excessive flows.

#### **Features**

- Controlled Bleed Resets Automatically
- Field Adjustable
- Positive Shut-off Option
- Materials: 316SS
- Maximum Pressure 6000 PSIG
- Detects Excess Flows
- Output: Switch Contact (Optional)
- Function: Restricts or Shuts Off Flow

#### Operation

Flow enters the unit and makes a right angle to the outlet port across the nose of a magnetic piston. The piston is held in place by attraction to an adjusting screw magnet. A pressure differential is created by flow across the piston. When the differential is great enough, the piston slides to a seat at the outlet port. The flow rate at which the piston actuates can be changed externally by turning the adjusting screw, thereby changing the piston's relationship with the flow stream. In the auto reset model after actuation, the piston resets on a metal to metal seat that allows a controlled bleed. To reset the unit, pressure must be equalized on both sides of the piston.

For positive shut-off an elastomer is used on the nose of the piston. When it comes to rest on the seat it provides a bubble tight closure. To reopen the valve there are two options.

1. The upstream pipeline must be bled to atmosphere if the line downstream is at atmosphere.

2. A by-pass line with an on/off valve must be installed to port the upstream pressure to the down-stream pipeline to equalize the pressure.

#### • Actuation points for air at 68°F and 14.7 PSIA.

Correction must be made for other fluids, line pressure and temperatures. Please consult your representative or the factory.

#### **Applications**

- CNG Delivery
- High Pressure
   Plant Lines
- Hydraulic Systems



#### **Calibration Range**


Model	Adjustable Range Air SLPM (SCFM)	Adjustable Range Water LPM (GPM)	PORT FNPT
HPEFV-250	4 to 1132 (0.14 to 40)	0.100 to15.1 (0.026 to 4)	1/4"
HPEFV-500	142 to 2123 (5 to 75)	1.9 to 37.8 (0.5 to 10)	1/2"
HPEFV-750	425 to 3681 (15 to 130)	3.8 to 75.7 (1 to 20)	3/4"

Pressure Loss				
Model	Air SLPM (SCFM)	Water LPM (GPM)	ΔP to Atmosphere BARD (PSID)	
HPEFV-250	4 (0.14)	0.1 (0.26)	0.21 (3.0)	
	500 (17.5)	5 (1.32)	0.41 (6)	
	1132 (39.62)	15.1 (3.99)	0.83 (12)	
HPEFV-500	142 (4.97)	1.9 (0.5)	0.07 (1)	
	1000 (35)	25 (6.6)	0.28 (4)	
	2123 (74.31)	37.8 (9.98)	0.48 (7)	
HPEFV-750	425 (14.88)	3.8 (1)	0.14 (2)	
	1800 (63)	4.7 (12.4)	0.21 (3)	
	3681 (128.84)	75.7 (19.98)	0.34 (5)	

#### Temperature Operating Range

• 32° to 220°F (-0° to 104°C) For other temperature ranges consult factory. Adjustable High Pressure Safety Excess Flow Valve

ES - Option				
Switch Data	SPST UL File #E70063	LEADS		
Maximum Switching Vol	tage			
DC (V)	200	<u> </u> μγ		
AC (V)	150			
Contact Rating		Ŭ		
DC (W)	50			
DC (VA)	70	leads 18 in. min.		
Maximum Switching Cur	from body 22 AWG,			
DC (A)	1.0	TFE insulation		
AC (A)	0.7			

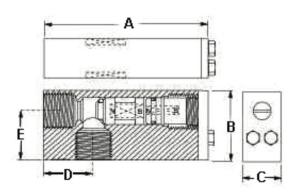

Specifications			
Body Material	Max Working Pressure PSIG (barg)	Wetted Parts	Seal
316SS	6,000 (206.84)	316SS, Epoxy	Viton ®

#### Installation

We suggest the unit be calibrated in the attitude in which it will be installed. An actuation point approximately 3 or 4 times the normal Maximum flow rate at the lowest line pressure should be chosen to avoid the valve actuating from initial pressurization of the system and normal surges. If flow is kept constant, an actuation point 10% above the normal rate may be used.

Dimensions						
Model	Weight	А	В	С	D	E
HPEFV-250	1.47 (0.667)	3.75 (149)	1.5 (38)	1 (25)	1 (25)	1 (25)
HPEFV-500	2.625 (1.19)	4.25 (108)	2 (50)	1.25 (32)	1.25 (32)	1.37 (35)
HPEFV-750	3.44 (1.56)	5.25 (133)	2.25 (57)	1.25 (32)	1.625 (45)	1.625 (41)

# How to Order

#### Sales@ChemTec.com | 800.222.2177

Model	Size	Materials	Positive Shut-Off	Options
HPEFV	200 500 750	S 316SS (Other Material available on request)	PSO (Blank for controlled bleed model)	O2       Oxygen Cleaned         HT       High Temperature         Unit 340° F (171° C)         KZ       FFKM Perfluoroelastomer         EPR       EPR Seals         FP*       Factory Presetting (State flow rate, medium and line pressure)         Required W/ES Option         ESFP       Normally Open Reed Switch Option Requires Factory Presetting

\*Consult Factory | Viton® - E.I. Dupont & Co | Teflon® - E.I. Dupont & Co | Kalrez® - E.I. Dupont & Co All dimensions are subject to change for quality improvement. Not responsible for printing errors.

ChemTec's Ultra High Purity Teflon® LPH Series Flow Monitors				
Flow Range	50 ML to 5000 ML			
Flared Fitting Ports	1/4", 3/8", 1/2"			
Super-300 Type Nippon Pillar Fitting®	1/8", 1/4", 3/8", 1/2", 3/4"			

\*\*More Custom Options Available, please contact the factory



**Flared Fitting** 



NPS300

ChemTec's Ultra High Purity Teflon® MAO Flow Meter						
Calibration in Water Tables		VDC	Hz	mA	Ports FN	
MAO 125/250	0 ML - 1800 ML	0-5	0-200	0-20	1/8" - 1/4"	
MAO 500	0.5 GPM - 3.5 GPM	0-5	0-200	0-20	1/2"	



MAO 125/250



MAO 500

# LPH UHP Series for Ultra High Purity

#### **Applications**

• Ultra High Purity Gases

#### **Key Features**

- Compact Size
- 1/2" MVCR

#### **Features**

- Close On/Off Differential
- No Seals
- EP to 10RA
- 316L Stainless Steel Materials
- Senses High/Low Flow Conditions
- Switch Contact Output
- In-Line Vertical Plumbing
- Confirms Normal Flow Conditions


#### **Operations**

As flow is established upward through the unit and continues to increase, the pressure differential across the grooved magnetic piston increases until it overcomes the small piston's resistance. This causes it to progress fully upward which actuates the dry reed switch. This is a snap action and occurs in the decreasing mode as well.


#### **Features**

- Actuation Points for Nitrogen on increasing flow (see graph)
- Deactuation Points averages 10% less than actuation point
- Flow Setting Accuracy ±10% of actuation points shown
- Repeatability ±1%
- Unit will pass greater flows



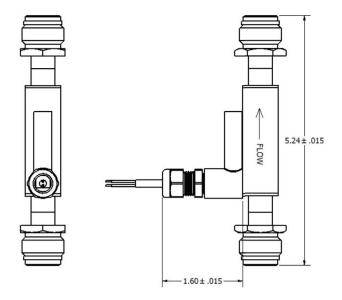

# **LPH UHP Series**

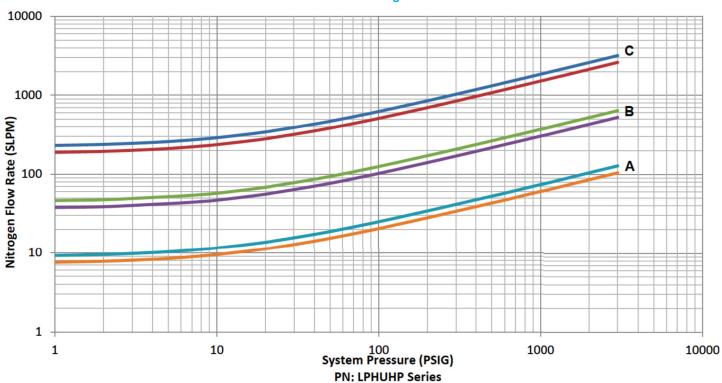

**Calibration Range** 

Switch Data	SPST	SPDT					
Maximum Switching Vo	Maximum Switching Voltage						
DC (V)	250	175					
AC (V)	265	120					
Contact Rating	Contact Rating						
DC (W)	50	5					
AC (VA)	50	5					
Maximum Switching Current (A)							
DC (A)	1.5	0.25					
AC (A)	1.1	0.18					

Leads		SP UL File <del>f</del>	•••	SPDT UL File #E471070	
	22 AWG	rom body; PVC red, keted wire		36" min. from body; 24 AWG PVC jack- eted wire- black: N.O., red: N.C.; white: common	

#### **Temperature Operating Range**

• -40° to -220°F; (-40° to 105°C) For other temperature ranges consult factory.

Calibration Range						
Model	Weight Lbs. (Kg)	Max Working Pressure PSIG (barg)	Wetted Parts	Fluid Ports	Leak Check	
LPH- UHP-8	0.5 lb/ 0.23 kg	3000 PSIG (206.8 barg)	316L Stainless Steel	1/2" MVCR (8)	1x10 atm. ccHe/sec in board	

#### Installation

Mount vertical with inlet port down.

How to Order							
Model	Calibration Range	Switch					
LPH UHP 8	A B C	N.C. SPDT	Single Pole Single Throw Normally Closed Single Pole Double Throw				

\*Contact factory for more options.

3

Flow Monitors, Flow Meters, Excess Flow Valves